

1. Unplug power cable from rear of unit
2. Insert USB drive containing older version software into the USB port on the rear panel
3. While holding down the power button on the front panel, insert power lead.. don't release power button.
4. Once you can see "boot.. soft" on front display, then release power button.
5. The recorder will automatically initiate the update procedure
6. When finished, you will see "software successfully updated" on the TV screen
7. When you see "boot" on the front display, you can remove the USB drive from the rear as recorder will automatically start again with the revised software version.